

***LECTRO TRUCK* Maintenance Tips**

Before Each Use

Inspect straps for wear & fraying; if worn or damaged, replace.

Inspect strap bar bumpers; if damaged, replace.

Inspect foot pads; if worn or damaged, replace.

Inspect tri-pod for proper operation.

Test limit switch operation.

Verify rubber strips between the battery pack & frame are secured to battery pack flange.

Verify set screw on cam is hand tightened; if unable to secure strap, adjust the cam properly, and use red loctite to secure set screw.

Verify hook bar latch is hand tightened with red loctite.

Every 20 hours

Lubricate drive screw with a silicone or teflon based spray. **DO NOT USE GREASE.**

Inspect tires.

Every 40 hours

Lubricate four rollers with a silicone or teflon based spray.

Lubricate tri-pod with spray chain lubricant.

Keep it genuine.

Battery

When Lectro-truck™ is not in use, plug battery pack into 110V outlet to maintain charge.

Use only LECTRO TRUCK replacement parts & recommended type of lubricants.

Failure to follow these maintenance tips, may void your warranty.